



**Installation Data Manual**  
**Models 59C, 59F, 59G, 59K, 59P, 59S, 59T**  
**Submersible Level Transmitter Series**



**DSPM** *Industria*  
sensori & trasduttori

98MANAL59Y  
Rev. E

Via Paolo Uccello 4 - 20148 Milano  
Tel +39 02 48 009 757 Fax +39 02 48 002 070  
info@dspmindustria.it www.dspmindustria.it


**This manual contains important information on proper usage of these devices. Read this manual carefully before attempting to install or powering up any of these Submersible Level Transmitters.**

**Handling Requirements and Cautions:**


1. All electrical & pressure connections should be compatible with the model specifications as outlined previously.
2. The product's internal electrical circuitry is DC isolated from case ground. It is recommended that the case ground wire be connected to earth ground at the cable termination as this is an integral part of the internal surge protection and noise immunity features. Proper grounding techniques should be used to avoid ground loops.
3. This series is equipped with an integrated breather tube for atmospheric pressure reference and have a PTFE filter attached to the tube end for ingress protection while allowing for proper product function. Installation of the cable end should be in a control cabinet or suitable terminal box located in dry area which is free of aggressive gasses to avoid damage. The enclosure used should have at least a small opening/vent to allow for atmospheric pressure changes as the breather tube needs to sense barometric pressure changes and compensate for them. At no time should the filter be removed while in service. If any mist, vapor or fluid is permitted to enter this breather without the filter, total unit failure will likely occur. Contact Viatran for replacement filters if needed.
4. Due to the internal breather tube, tight bends should not be applied to the transmitter's cable. For static measurements a minimum bend radius of 10x the cable diameter should be used. For dynamic measurements a minimum of 20x is recommended.
5. Some models are designed for use without a protective cap. They are packaged with a rubber cap to shield the sensor prior to installation. This rubber cap should be removed only moments before placing the transmitter into service. The cap should be replaced if the transmitter is removed from service.
6. At no time should an object be inserted into the pressure port or pressed against the sensing area to deflect the sensor (to test or simulate pressure), as on some models, permanent damage to the sensing diaphragm can occur and void any warranty.
7. When shipped in quantities, units should be packaged individually and securely to eliminate possible damage.

## DIMENSIONAL DRAWINGS - VIATRAN MODELS 59C, 59F, 59G, 59K, 59P, 59S & 59T


Note: The drawing below is for informational purposes only and is not to scale. All dimensions are nominal, in inches and for reference purposes only.

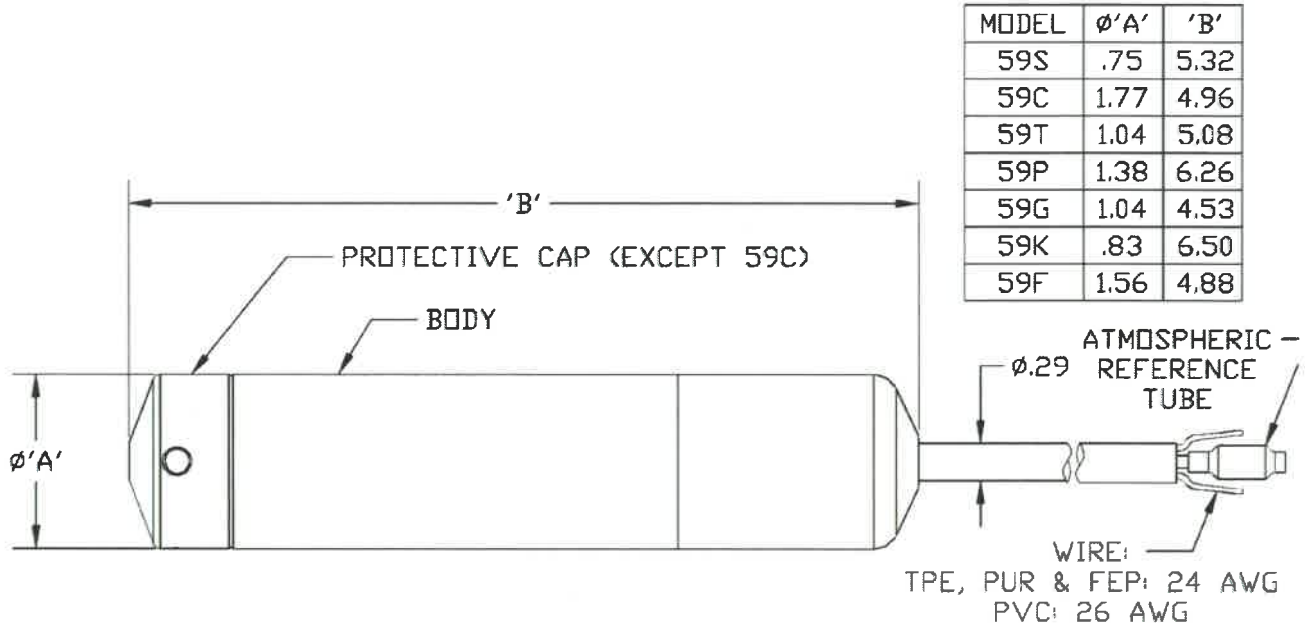

### Standard Wiring:

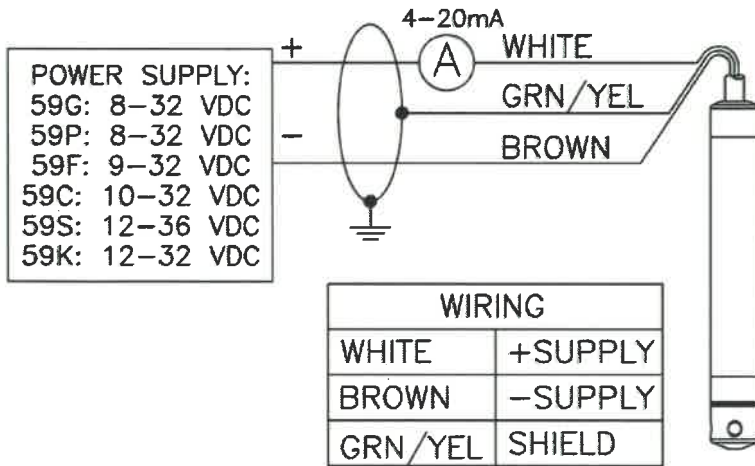

### Model 59T Wiring:

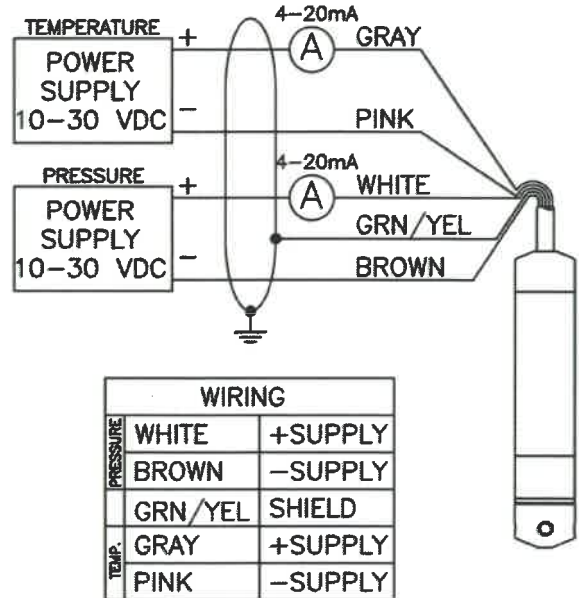


### Model Series 59Y

**WARNING!** Electrically connect or disconnect the transmitter only when power is off (no current)!

**Outdoor installations:**

If your transmitter will be located outside, it could be subject to lightning or voltage surges. It is suggested that a Voltage Surge Protector be installed between the cable termination and your other electronics. Additional protection of up to 10kA is available from Viatran in a DIN Rail mounted device that can be mounted in a panel box at the cable termination. See our accessories for surge protector offerings.

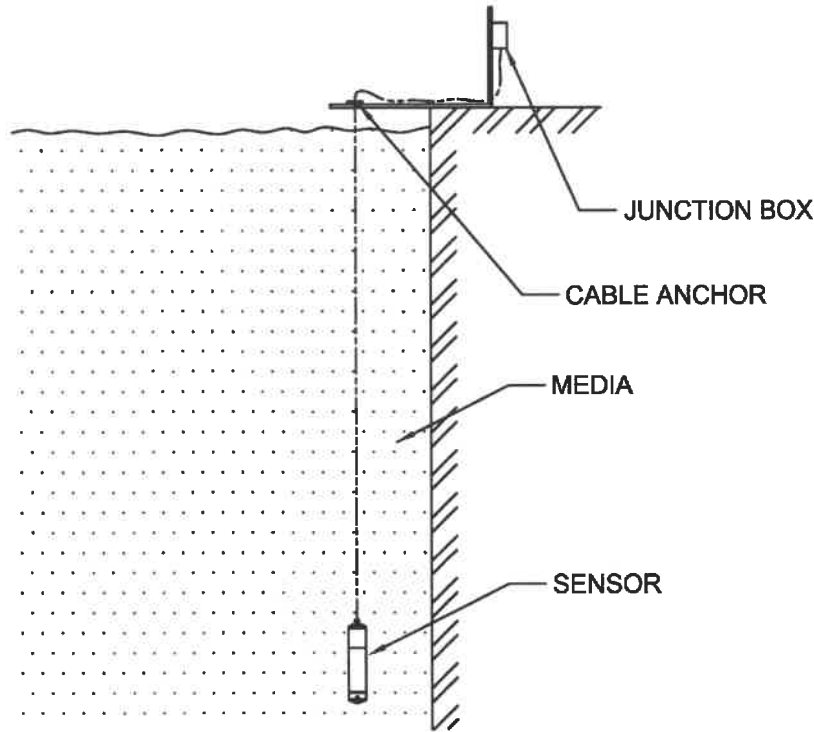


**Protective Cap Removal (model dependent):**

For the protection of the sensor diaphragm, some models have a snapped-on protection cap. This cap can be temporarily removed if cleaning of the cap is required. Once the cap is removed, it can be cleaned with a compatible cleaner. The cap is made of POM (Polyoxymethylene) plastic.

NOTE: If it is necessary to remove the protection cap, this has to be done with utmost care.

To prevent damage of the diaphragm, please follow these instructions:

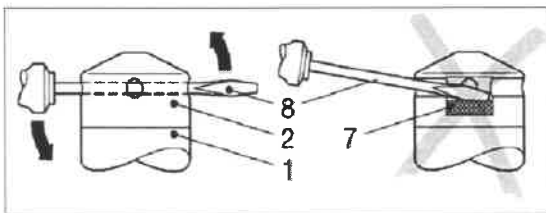

**Removal with a tool (refer to figure at left)**

- Hold the probe in a way that the protection cap points upwards.
- Slide a small tool such as a screwdriver (8) straight through two opposite passage holes in the protective cap (2). Make sure the leading edge of your tool is level or points towards the cap rather than the sensor during insertion. If the tool comes in contact with the sensor face, damage will likely occur. Even a slight crease of the diaphragm will cause permanent damage.

- Lever off the cap by moving up the handle of the tool (see arrows).
- Make sure that the sensor (7) under the protection cap does not get damaged!

**Standard Wire Information:**

Cable Description	PUR Polyurethane	PVC Polyvinyl Chloride	FEP Fluorinated Ethylene-Propylene	TPE Thermoplastic Elastomer
<b>Weight</b>	0.04 lbs/ft	0.04 lbs/ft	0.04 lbs/ft	0.03 lbs/ft
<b>OD</b>	0.29"	0.29"	0.29"	0.29"
<b>Max Pulling Tension</b>	220 lbs	45 lbs	220 lbs	220 lbs
<b>Conductors</b>	6-24 AWG	6-26 AWG	6-24 AWG	6-24 AWG
<b>Insulation: Conductors/Jacket</b>	PE / PUR	PE / PVC	PE / FEP	TPE (PELON Special-TPE)/ TPE (TPE-U)
<b>Drain/Shield</b>	24 AWG	26 AWG	24 AWG	24 AWG
<b>Vent Tube</b>	0.098" OD/Polyamid	0.098" OD/Polyamid	0.098" OD/Polyamid	0.098" OD/Polyamid
<b>Conductor Resistance</b>	0.026 Ohms/ft	0.041 Ohms/ft	0.026 Ohms/ft	0.026 Ohms/ft

**ACCESSORIES – OPTIONAL EQUIPMENT**

Please contact Viatran for these and other available accessories.

Digital Meter	Voltage Surge Protector	Aneroid Bellows	Junction Box
Breather Tube Filter	Desiccant Kit	Cable Clamp	Vent Compensator

**MAINTENANCE AND REPAIR**

All Viatran transmitters have been designed to function free from routine or scheduled maintenance. Simple cleaning of the pressure cavity on an as needed basis will provide many years of satisfactory performance. Protecting the product from continued exposure to moisture or fluids at the electrical connection and breather area will eliminate premature internal failure of the product. Generally any time the product is removed from service; the pressure cavity should be flushed with a compatible cleaner to prevent media buildup. During the cleaning process only a soft, lint-free cloth is recommended. Never use a coarse or stiff bristle brush to clean media from the diaphragm surface.

It is suggested that the calibration be verified on a usage dependent schedule. If the product is in continuous service 7 days a week, then calibration verification may be necessary every 6 to 8 months. If the product is in a lab test environment a more lenient verification schedule would be appropriate. In all instances the performance of the product will depend on the individual application or process in which it is installed. More continued usage would require a shorter period between calibration verification and product maintenance.

If a product is perceived to be exhibiting problems, it can be returned to Viatran for analysis and/or repair. It is suggested that only Viatran personnel attempt repair of the product. Any damage resulting from customer disassembly would result in a loss of coverage under the warranty policy. Older products returned for repair are updated to current specifications unless the repair cost would outweigh the cost of a new replacement model. Products returned for repair should include information on the person to contact for repair quote approval, the individual to contact if Viatran's technical staff requires additional information during analysis, and a brief description of the problem associated with the product's failure.

## REPAIR INSTRUCTIONS

Viatran's Transmitters are designed to be easily repaired and recalibrated if necessary. If a failure occurs, the transmitter should be returned to the factory for inspection and testing. Please contact the Customer Support Department at 1-800-688-0030, for a return tracking number and/or a repair cost estimate. A nominal inspection fee is charged on all units returned to the factory which are not subsequently repaired.

## WARRANTY

Viatran Corporation warrants that its products shall be free from defective workmanship and/or material for a period of twelve (12) months from the date of shipment, provided that Viatran's obligation hereunder shall be limited to correcting any defective workmanship and/or replacing any defective material f.o.b. factory. No allowance will be made for any expense incurred for correcting any defective workmanship and/or material without written consent by Viatran. This warranty is in lieu of all other warranties expressed or implied.

The contents of this manual are correct to the best of Viatran's knowledge at the time of publishing. Viatran is not liable for any incorrect statements and/or their effects. We reserve the right to change information at any time.